Remote Control Learning And Functions

Remote control keys function

1. △ : In
2. ○ : Stop
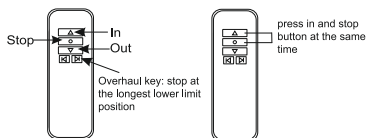3. ▽ : Out
4. ◁| : Empty
5. |▷ : Overhaul Key

6.Reset: press and hold the remote control in and out keys at the same time until the buzzer sounds.

Stop · In · Out · Overhaul key: stop at the longest lower limit position · press in and stop button at the same time

Remote control learning

Within 10 seconds of plugging in the power of the platform, simultaneously press and hold the "in" and "Stop" buttons of the remote control for 2~3S, the platform will move back and forth once, indicating that the remote control is successfully paired.

Note: When leaving the factory, the remote control has already paired, no need to learn to pair again
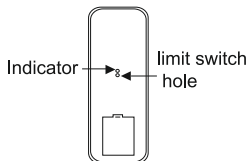
Limit Setting

Method for setting electronic limit of the platform

Electronic lower limit:
1/Use a needle to press the limit switch on the back of the remote control, and the indicator light will be on at this time;
2/press the remote control "out button" again, the platform will run outwards, and when it reaches the position you want, Press the "stop button".

Indicator · limit switch hole

3/ Use the needle to press the limit switch on the back of the remote control again. At this time, the indicator light is off, the platform will move back and forth once, and the lower limit setting is successful.

Electronic upper limit:
1/Use the needle to press the limit switch on the back of the remote control, and the indicator light will be on;
2/ press the remote control "in" button, the platform is folded inward, and when it is folded to the position you need, press "stop button",
3/ Use a needle to press the limit switch on the back of the remote control again. At this time, the indicator light is off, and the platform will move back and forth once, and the upper limit setting is successful.

Suprema Polska Sp. z o.o.
ul. Atlasowa 19, 02-437 Warszawa

SUPREMA SCREEN

Instruction Manual

Laser projector intelligent telescopic platform
Model: Platform

⚠ Note

- When the projector is turned on, do not look directly at the projector lens to avoid the strong light from hurting your eyes.
- The L-shaped connection fixing plate of the platform needs to be fixed.
- The platform cannot be pressed to the wire during movement and contraction.
- In the event of a sudden power failure during use, please reset the platform once before using it again, otherwise. precise positioning will not be possible.

🚫 Disassembly prohibit

Please do not disassemble or disassemble equipment parts.

Platform Component
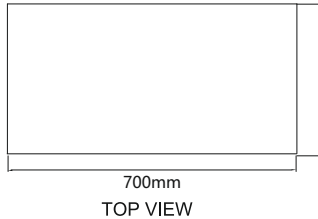
Laser Projector Intelligent Telescopic Platform

① Casing
② In
③ Out
④ Power indicator light
⑤ Memory
⑥ Reset
⑦ DC5-12V Output
⑧ DC5-12V Input
⑨ Power socket
⑩ cable clip

② ③ ④ ⑤ ⑥

⑦ ⑧ ⑨

①

⑩

Platform Backside

Input trigger

Projector Backside

IN AC220V 50Hz   HDMI   USB2.0   RS3485
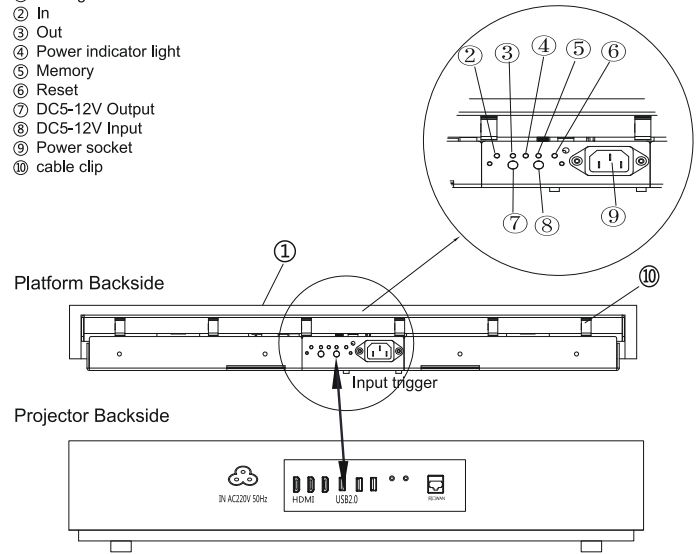
Use a trigger cable to connect the platform with the projector's USB port to achieve intelligent linkage (when the projector is turned on/off, the platform will turned on/off synchronously)

Accessories

User Manual	1pcs	remote contorl	1pcs
Certificate	1pcs	M5x35mm tapping screw	8pcs
power cable	1pcs	M4 screw	8pcs
Expansive rubber	8pcs		